

CHUBU CORPORATION


MODEL SS-250C

Manufactured by:

CHUBU CORPORATION

1533-1 Dogamine, Hagasaki, Kuwana, Mie, Japan.

SS-250C FOOD SLICER

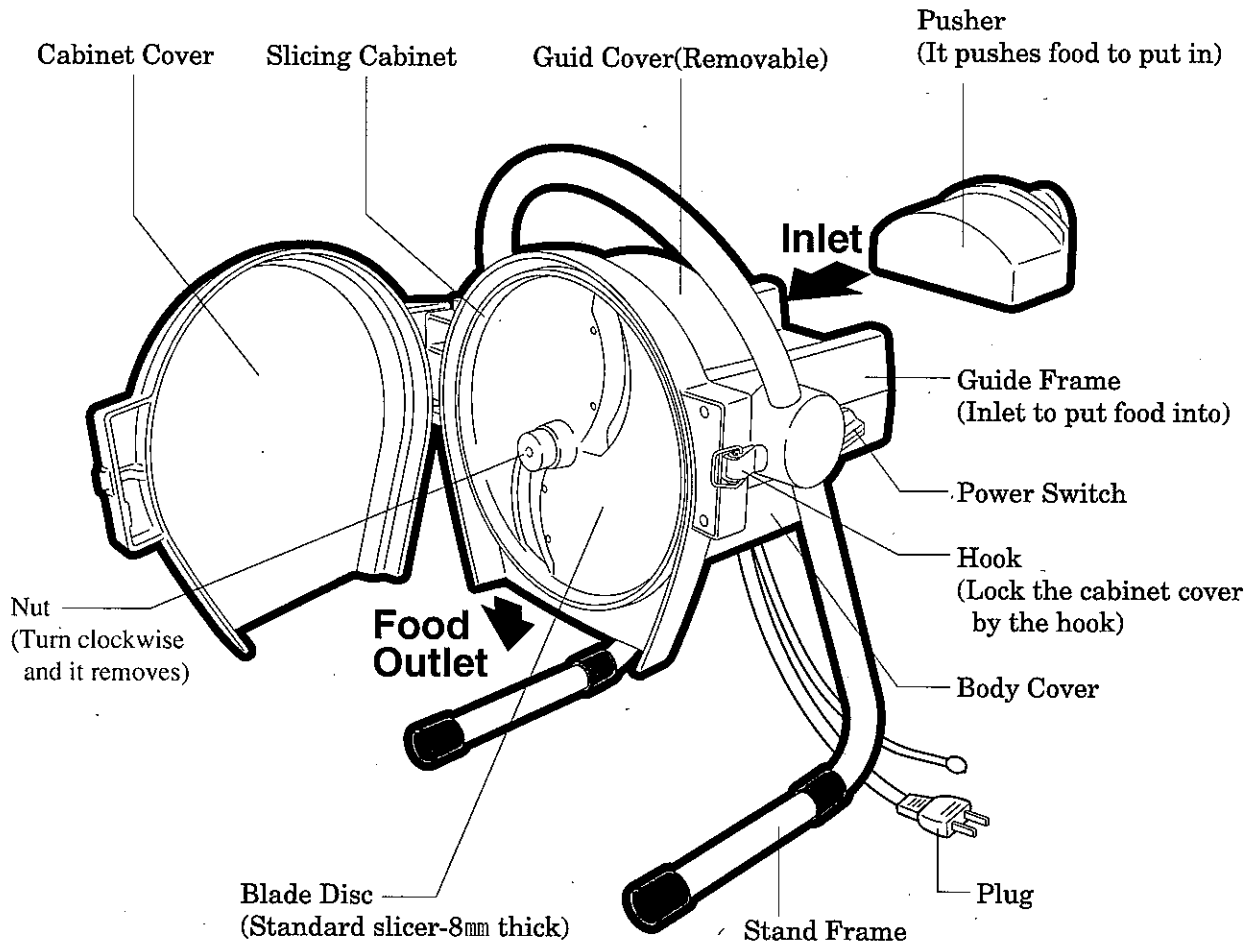

SPECIFICATIONS

Electrical : 220V

Motor : 80W

Weight : 7.5kgs.

Dimension : 320width × 270depth × 505height(m.m.)

EASY TO SELECT CUTTINGS

Just change blade discs and various food cuttings are available.



A) Slicer disc blades (2 blades fixed) : SS-0.5B(0.5mm thick), SS-1.2B(1.2mm), SS-1.5B(1.5mm)
SS-2.0B(2.0mm), SS-2.5B(2.5mm), SS-3.0B(3.0mm)

B) Shredder disc blades : SS-C1B(1.2 × 3.0mm) Capacity : Radish 1.5kgs per min.
SS-C2B(1.5 × 3.0mm)
SS-C3B(2.0 × 4.0mm)


C) Grater disc blade : SS-D1B Capacity : Radish 1.5kgs per min.
Apply "Attachment for Grator"

METHOD TO REPLACE BLADE DISCS

1. Take off and replace blade discs after having pulled out the plug.
2. Unlock the hook and open the cover. 3. Turn the nut clockwise and take it off. And then remove the blade disc. Pay attention to the blade. It is sharp.

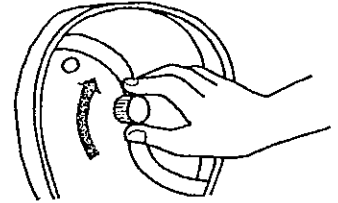
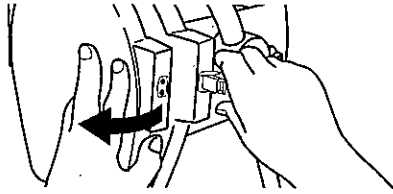


4. Install a new blade disc on to the machine in putting it through the shaft.

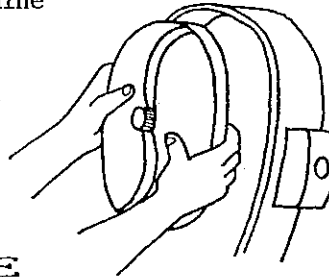



MAINTENANCE

1. Pull out the plug before cleaning the machine or removal of blades, etc.

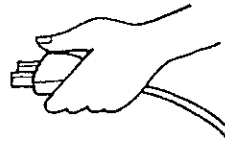
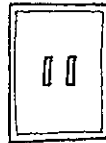


A) Cleaning


1. Clean the outside of the machine with wet cloth. But don't clean the plastic parts such as covers and body with wet cloth over the temperature of 30°C.
2. Pull out the pin at the hinge connecting the slicing cabinet and the cabinet cover. Then the cabinet cover can be taken off. Take out the stain on the cover with water. Finally, please take out the water on the cover with dry cloth and dry it.

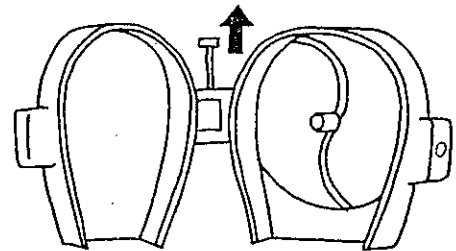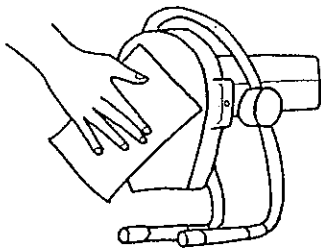

3. Remove the guide cover pushing one side of it. Clean with water and take off the water completely.
4. Remove the blade disc from the machine (see above 3). Take off the water completely.

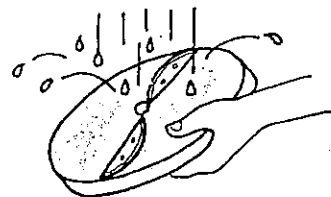
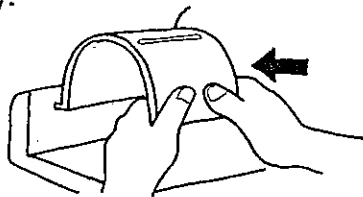


4. Take off the water completely (complete dry) and keep it away from the humidity.

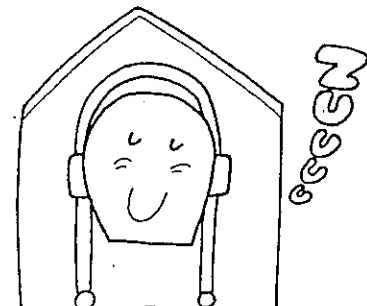


C A T I O N :

1. Please install the machine on a stable and horizontal place.
2. Please keep it away from high temperature and direct sun beam.

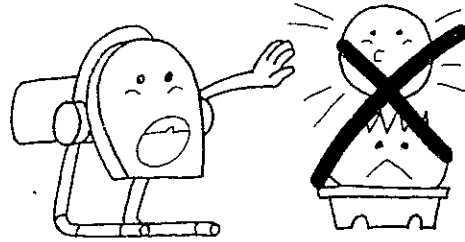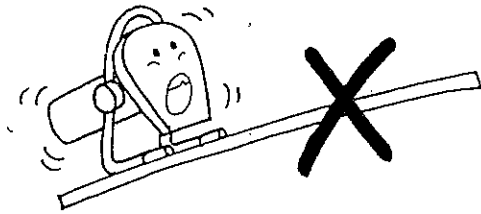


3. Please do never pour water over it or dip it in the water.


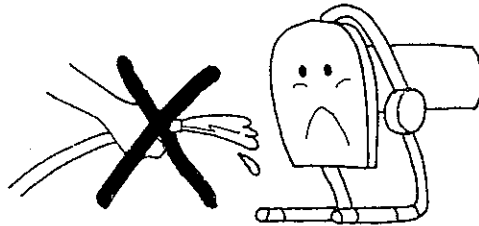


H O W T O U S E

1. Please prepare food. Please cut the food in proper size so that it can be put into the inlet of the machine.
2. Please prepare a bowl or tray beneath the outlet to receive the food.

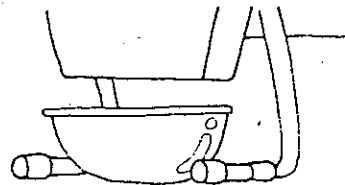

3. Please wire the electricity and put on the power switch (POWER). It starts the motor and slicing.
4. Please put the food into the inlet and push it inside to be processed.

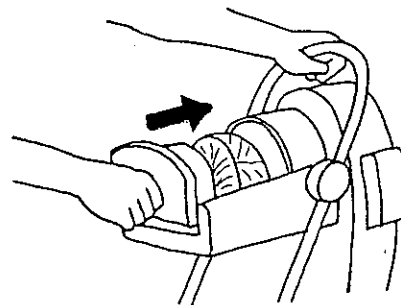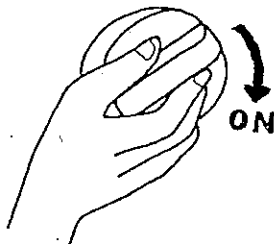

4. Please turn off the power switch after used.

Remarks :

Protector : This machine is equipped with a protector, which automatically stop operation to protect the motor when heavy burdens are put onto the machine. Please turn off the power switch and pull out the plug when the machine stops. And then please check it and resolve the problem. The protector will automatically restore its working in about 30 minutes.